

UX9 USER MANUAL

1. BASIC KNOWLEDGE.....	4
a. Introduction.....	4
b. Safety Information.....	4
c. Safety and Health Precautions.....	4
C1. General Guideline.....	4
C2. Mobile Phone Guideline.....	5
C3. Batteries and Guideline.....	5
C4. Charger and Accessories.....	6
C5. Cleaning and Maintenance.....	7
C6. Others.....	7
2. BEFORE START.....	7
a. Parts names and Explanations.....	7
A1. Keypad description.....	7
A2. Using T-Flash Card.....	7
b. Batteries.....	8
B1. Changing a battery.....	8
B2. Charging a battery.....	9
c. Connecting Network.....	10
C1. SIM/UIM card.....	10
C2. Insert and remove SIM/UIM card.....	10
C3. Power on or off.....	11
C4. Unlock the SIM/UIM card.....	12
C5. Unlock the mobile phone.....	12
C6. Connecting to the network.....	12
3. BASIC FUNCTIONS.....	13
a. Making a call.....	13
b. Answering a call.....	13
c. Emergency call.....	13
d. Options during a call.....	14
4. FUNCTION MENU.....	14

a.	Using the function menu.....	15
b.	Menu function.....	15
c.	Phone book.....	17
d.	Calls.....	18
d1.	<i>Calls</i>.....	18
d2.	<i>General call settings</i>.....	18
e.	Messages.....	20
e1.	<i>SMS</i>.....	20
e2.	<i>MMS</i>.....	21
e3.	<i>Voice mail server</i>.....	22
e4.	<i>Broadcast message</i>.....	22
f.	File Manager.....	22
g.	Bluetooth.....	22
h.	Fun.....	23
i.	Facebook.....	23
j.	User profiles.....	23
k.	Video recorder.....	24
l.	Extra.....	24
l1.	<i>Calculator</i>.....	24
l2.	<i>Currency converter</i>.....	24
l3.	<i>Stopwatch</i>.....	24
l4.	<i>E-book reader</i>.....	24
l5.	<i>Bluetooth</i>.....	25
m.	Services.....	25
m1.	<i>STK</i>.....	25
m2.	<i>WAP</i>.....	25
m3.	<i>Data account</i>.....	25
n.	Media.....	26
n1.	<i>Camera</i>.....	26
n2.	<i>Image viewer</i>.....	26
n3.	<i>Video recorder</i>.....	26
n4.	<i>Video player</i>.....	26

n5. <i>Audio player</i>	26
n6. <i>Sound recorder</i>	26
n7. <i>FM radio</i>	27
n8. <i>Schedule FM record</i>	27
o. <i>Audio player</i>	27
p. <i>Camera</i>	28
q. <i>MMS</i>	28
r. <i>Settings</i>	29
r1. <i>Phone setup</i>	29
r2. <i>Network setup</i>	29
r3. <i>Security setup</i>	30
r4. <i>Restore factory settings</i>	31
s. <i>Tools</i>	31
s1. <i>Calendar</i>	31
s2. <i>To do list</i>	31
s3. <i>Alarm</i>	31
s4. <i>World clock</i>	31
5. INPUT METHOD	32

1. BASIC KNOWLEDGE

a. INTRODUCTION:

Thank you for purchasing the **UX9**. By reading these guidelines before using your mobile phone you will have an overall knowledge of this mobile phone and understand its simple but outstanding functions

- The mobile phone is particularly designed for GSM/GPRS/CDMA networks environment. In addition to the basic function of communication, the mobile phone also provides you with multiple applied functions, which include name card style phone book, clock alarm, agenda, currency converter, calculator, games, audio player, sound recorder and so on, to make your work and leisure activities more convenient. Besides, the mobile phone has unique interface and perfect function design to meet your different needs.
- The mobile phone reaches the requirement of GSM/GPRS/CDMA standard and has passed the qualification of authoritative organizations worldwide.
- Our company keeps the right of modifying the content in the manual without making any notification in advance.

b. SAFETY INFORMATION:

- If your mobile phone is lost or stolen, inform immediately the telecom branch or its outlet to forbid the use of your mobile phone and SIM/UIM card, which will help you to avoid the economic loss caused by other's misuse of your mobile phone.
- When you contact the telecom branch or its outlet, they need to know the IMEI number of your mobile phone, which is marked on the tab on the back of your mobile phone (you can find it with battery taken out). Keep the number for future use.
- Please take precautionary measure to avoid abuse of your mobile phone. Such as:
 - Set the PIN number of the SIM card, and modify it if others know.
 - When you leave your car, please do not put the mobile phone in a place easy to be seen. Better take it with your or put it in trunk.
 - Set call restriction.

c. SAFETY & HEALTH PRECAUTIONS:

Read the guidelines before using your mobile phone. Failure to comply with them may be dangerous

C1. General Guidelines:

- Only use the approved battery and charger. Other products may lead to leaking, over heat, explosion, and fire.
- Do not drop, knock, or shake the mobile phone. Rough handling may cause damage to the mobile phone or fire.

- Do not place mobile phone, battery, or charger in the microwave oven or high pressure equipment. Doing so may break the internal circuit boards or cause a fire.
- Do not use mobile phone in any area with a potentially explosive or flammable atmosphere. Using mobile phone in such an area could cause a fire or explosion.
- Do not keep mobile phone in hot, humid, or dusty areas, as its moving parts may be damaged.
- Keep your mobile phone out of the reach of children. Do not let children play with mobile phone to avoid accident injury.
- Do not leave mobile phone on unstable or uneven place. Such condition may result in mobile phone falling.

C2. Mobile Phone Guidelines:

- Switch off your mobile phone before boarding an aircraft or in hospital and any other facility where you are notified to do so. Mobile phone affects the electronic equipments and medication equipments. The mobile phone has auto switch on function, please check your alarm setting and make sure the mobile phone will not switch on automatically during the flight.
- Certain electronic equipments may not be shielded against the RF signals from your wireless phone, such as hearing aid, pacemakers, other medical devices, fire sensor, auto gate, and others. For the satisfactory operation of the equipment and for the safety of personnel, please consult the manufacturer or local sales outlet to discuss alternatives.
- Do not press hard or hit on the screen. Rough handling can break the internal circuit board and the screen. The liquid from screen can be dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the mobile. Unauthorized modification or dismantle will result in damaging the mobile phone.
- In some cases, mobile phone has side effects on the vehicle carried electronic equipments. Please do not use mobile phone under such circumstances. Failure to observe these instructions may lead to the denial of legal right.
- Do not operate mobile phone with sharp objects such as needle or ball pen. Sharp objects will damage mobile phone or lead to malfunction.
- Please do not use mobile phone whose wire is damaged. Otherwise it will be dangerous for the user.
- Please do not place mobile phone close to magnetic objects. Mobile phone can eliminate the information from disc, credit card and other cards.
- Please keep small metal objects away from mobile phone's ear phone. The speaker has magnetism and attract small metal objects which has potential to damage itself and the one who use it,
- Precipitation, humidity, and liquids will corrode electronic circuits. Keep the phone dry.

C3. Battery Guidelines:

- Please keep mobile phone away from fire. Fire will damage the batteries and lead to explosion.
- While changing batteries, avoid pressing hard as it will cause the batteries to leak, over heat, explosion and may catch fire.

- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (wire line, clip) or necklace connect two terminals. Short circuit may damage the battery.
- Please do not weld the battery's terminal. Welding the battery will damage it.
- The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.
- Do not modify or dismantle the battery. Unauthorized modification or dismantle will result in damaging the mobile battery.
- Do not place batteries in or on the microwave oven or over heated places. That may damage the battery.
- During charging, using or storing, if batteries temperature rise, color change, or deformed, please stop using and replace with new battery.
- If the battery liquid is leaking or smelly, please remove it from fire to avoid explosion.
- Please keep battery away from humidity. Humidity will cause over heating, corrosion of the batteries.
- Please do not leave the battery in hot places such as in a car in summer as you will reduce the capacity and life time of the battery.
- Please do not leave the battery on charger for over 24 hours

C4. Charger and Accessories:

- Take the terminal to unplug the charger. Pulling the power line to unplug will damage the charger and cause electric shock or fire.
- Please control the charger output voltage below 6.5v to avoid the voltage being too high to damage the phone
- Please charge with dedicated voltage. Using mismatched power will damage the mobile phone and charger.
- Short circuit charger is forbidden. It will cause electric shock and damage the charger.
- If the power line is damaged, please do not use the charger
- Please keep the charger free from dust all the time.
- Keep charger away from liquid. Spilled liquid can be dangerous while charging.
- If the charger has close contact with the liquid, take off the charger from the socket immediately to prevent further damage.
- Do not modify or dismantle the charger. Unauthorized modification or dismantle will result in damaging the charger or the personnel
- Please avoid charging in place with humidity as it can overheat and corrode the batteries
- Do not touch the charger, power line or socket with wet hands as it can damage the battery or cause an electric shock which is hazardous.
- Do not store heavy article on top of power line or dismantle it. Doing so will cause electric shock and fire.

- Unplug the charger from the socket before cleaning and maintenance.

C5. Cleaning and Maintenance:

- Mobile phone, batteries, and charger are not water proof. Please do not use them in humid place such as shower room. Clean mobile phone, batteries, and charger with soft fabric.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the mobile phone.
- Please clean the socket regularly. Dirt can cause malfunction in the charger

C6. Others:

- Always keep the phone at room temperature between 50-40 degree Celsius and humidity between 35%-85%.
- Please keep mobile phone away from telephone, TV, Radio and other office electronic appliances. Since, Mobile phone has side effects on such equipments.
- Keep batteries away from direct sunlight. Keep batteries in a cool place with good ventilation
- Lifespan of batteries are limited. The stand by time of the batteries will be shortening after frequent charging. When the operation time is noticeable shorter than normal, the batteries are worn out. It is time to buy a new battery.
- Dispose off used batteries in accordance with location regulation. Always recycle. Do not dispose off batteries with normal daily waste

2. BEFORE START:

a. PARTS NAMES AND EXPLANATIONS:

a1. KEYPAD DESCRIPTION:

- **Left soft key-** In idle mode, press it to get into **Main menu**. In edit screen, press it to select and confirm.
- **Right soft key-** In edit screen, press it to clear and cancel.
- **Send1 key** - Press it to make or answer a call with SIM1. Press it in idle mode to show call logs.
- **Send2 key-**Press it to make or answer a call with SIM2/UIM. Press it in idle mode to show call logs
- **End key-**Press it to end or reject a call. Press it in edit screen to get back to idle mode.
- **OK key-**Press it to confirm.
- **Navigation keys-**Scroll to select the function.
- **Shortcut keys-**Press them in idle mode to the function directly. The shortcut keys include of **MP3, FM,Facebook** and **Camera**.

***Attention-**PRESS means press the key for short time then loosen. HOLD means press the key for more than 2 seconds.

a2. USING T-FLASH CARD:

You can use T-Flash card to expand your phone's memory capacity. The memory card slot is below the battery.

Insert T-Flash card

- Slide up the fixture and put it up.
- Put the card into the slot with the label side face up.
- Put the fixture down and slide down to lock.

REMOVE T-FLASH CARD:

- Slide up the fixture and put it up.
- Get the card out.

ATTENTION

- Frequent erasing and writing will shorten a memory card's lifespan.
- Do not remove a memory card from the phone or turn off the phone while data is being accessed or transferred. This *could result in loss of data and/or damage to the card or phone.
- Do not subject memory cards to strong shocks.
- Do not touch memory card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Keep memory cards away from small children or pets.
- Do not expose memory cards in a places subject to electro static discharge and/or electrical noise.

b. BATTERIES:

Batteries have been charged to 50% full. It can be used after unpack. The first three times batteries must be totally discharged before charging. It will help to prolong the batteries lifespan and working quality.

b1. CHANGING A BATTERY:

Please follow the steps to remove the battery:

- Push the back cover backward.
- Lift the battery up to remove it.




Please follow the steps to install a battery:

- Place the top part of the battery to connect with grooves on the phone.
- Push the battery downward till it clicks into place.



b2. CHARGING A BATTERY:

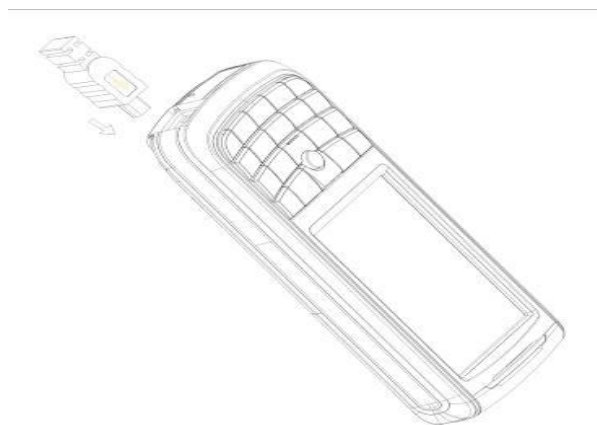

Plug the charger into the socket.

Connect the adapter into the left of the phone.

- Battery charging indicator sign will flash; if mobile phone is switched off during charging, the indicator will show on the screen. If the battery is too weak, the charging indicator sign will not show immediately after the charger plugs in.
- When charging indicator sign shows the battery is full and stop flashing, charging is finished. If charging while switched off, the screen shows charging finished. The charging will last for a few hours. It is normal that the battery, mobile phone, and charger's temperature rise. Disconnect the mobile phone, charger, and socket after charging finishes.

*** ATTENTION:**

- Please always charge the battery at place temperature between 50°C-40°C . Use only the supplied charger. Unauthorized charger may damage the phone and violate regulation and guarantee.
- When mobile phone is switched off due to lack of power or the indicator sign shows low battery, charge the battery in time. Battery charging time depends on the remaining battery charge.
- The stand by time and call time of this mobile phone is tested in an idealistic environment. In reality it is greatly affected by the signal strength of the cellular network, working environment and other factors
- Do not remove the battery during charging. Please make sure the battery is in place before charging.
- When charging is finished, unplug the adapter from the power outlet and from the phone.
- If you do not unplug the adapter from the power outlet and from the phone, after 5 to 8 hours, the phone will start charging again due to the failure of battery power. We strongly suggest no to do so. It will shorten the lifespan of batteries.

c. CONNECTING NETWORK:

c1. SIM/UIM CARD:

- Please insert the SIM card before switching on the mobile phone. SIM card is the key to GSM network.
- When you subscribe to a cellular network, the plug-in SIM card loaded with our subscription details such as your call history, call record, messages and others. SIM card can be removed and inserted into any GSM mobile phone (new mobile phone can read SIM card simultaneously)
- The plug-in SIM card and its contacts can be easily damaged by scratches or bending, please keep SIM card away from electric, magnetic objects. Once the SIM card is damaged, it will lead to loss of accessibility to GSM network.
- The UIM card is the key to CDMA network. Its functions are same with SIM card

Warning:

Switch off the mobile phone before removing the SIM/UIM card. It is forbidden to remove the SIM/UIM card when the power resource is connected.

C2. INSERT & REMOVE:

Handle the SIM/UIM card with care. The way to use the UIM card is same with the SIM card. Insert SIM card

- Switch off mobile phone and remove external electrical source.
- As shown on the picture, insert SIM card into the SIM card slot.



Remove SIM card

- Switch off the mobile phone and remove electrical source.
- As shown on the picture, slide the SIM card out from SIM card slot to remove it



C3. POWER ON/OFF:

Power on: hold the **End key** to turn on the phone. If necessary, enter the PIN and phone password then press **OK key**.

Power off: hold the **End key**.

If the mobile phone is switched on without inserting SIM/UIM card, please insert SIM/UIM card as instruction shown on screen. Mobile phone will run auto test once the SIM /UIM card is inserted.

The following messages will be displayed in order

- Please enter the PIN — if PIN is set for SIM/UIM card
- Please key in the password—if the password is set to unlock the mobile phone
- Searching for network—auto search for cellular network until connecting to network

C4. UNLOCK THE SIM/UIM CARD:

To eliminate unauthorized usage, SIM card can be locked by adding PIN1 number. Once select this function, PIN1 must be entered every time the mobile is switched on. If user does not set SIM card protection method, SIM card cannot be protected from unauthorized usage.

Press **End key** to turn on the phone.

Enter PIN number, touch **clear** to erase wrong input. Touch **confirm** to finish. For example, if PIN1 is 1234, then please input 1234.

If wrong PIN is entered for 3 times, the SIM card will be locked by the network. It requests PUK1 number, if you do not know PUK1 number, please do not input yourself. Give the SIM card to cellular network service to deal. Detail information please refer Security setting

Attention: The network supplier will set a standard PIN1 (between 4 to 8 digitals) for your SIM card. Please change it to your personal password. For details please see Security setting. The operations with UIM card are same with SIM card.

C5. UNLOCK THE MOBILE PHONE:

Please set pin number to protect your mobile phone from unauthorized usage. Once this function is selected, pin number must be entered every time the mobile is switched on. If user does not set pin number protection method, the mobile phone cannot be protected from unauthorized usage

- Input mobile phone password, touch **clear** to erase wrong input. Touch **confirm** to finish. For example, if the password is 1234, then please input 1234
- If you forget the mobile phone password please contact the local sales branch or service center to unlock the mobile phone. (Default mobile phone password is 1234)

C6. CONNECTING TO THE NETWORK:

After the SIM/UIM card is unlocked, the mobile phone searches for network service. Once connected, the cellular service provider will show on the center of the screen. The mobile phone is at idle stage and can make or receive a call.

Attention: If ONLY EMERGENCY shows on the screen, it means you are not in the service area of the network only the EMERGENCY call can be connected.

3. BASIC FUNCTIONS:

A. MAKING A CALL:

When cellular network service provider shows on the screen, you can receive or make a call through network. The received signal strength is shown on the up left corner of the screen (maximum 4 lines—best signal condition). The quality of network connection is affected by the environment. Moving within small scale can improve the network connection quality. To make a call, enter the phone number, including the area code, and press the **Send1/2 key** to select SIM/UIM card and dial.

Tips: For informational calls, add the + character that replaces the international access code, and enter the country code, area code (omit the leading 0, if necessary), and phone number. Press *** key** continuously to input the + character.

To make a call using the saved contacts, press **Left Soft key** to select **Phonebook**. Select the contact and press **Send1/2 key** to select SIM/UIM card and dial. Press **Options** to select **IP dial**, and then select SIM card to dial. Please set IP number and active it before using, refer to chapter **IP NUMBER**

To make a call using the log, press **Send1/2 key** in idle mode to view its call log. Scroll the desired number or name, and press **Send 1/2 key** to select SIM/UIM card and dial.

To adjust the volume of an active call, use the **Up Key/Down Key**.

B. ANSWERING A CALL:

- To answer a call, press the **Send key** or select **Options -> Answer**.
- To reject a call, press the **End key**.
- To mute ringing tone instead of answering a call, select **Silent**

If any key to answer is switched on, you can press any key to answer it (except **End key** and **Right soft key**). If the ear phone is connected, you can answer a call though ear phone.

C. EMERGENCY CALL:

If you are in the area covered by network service, you would be able to make Emergency call. If the cellular network service does not cover that area, **ONLY EMERGENCY** shows on the screen. That means you are not in the service area of the

network only the EMERGENCY call can be connected. If you are in area covered by network service, the Emergency call can be made without inserting SIM card.

D. OPTIONS DURING A CALL:

During the call, you can press **Right soft key** to switch on/off loud speaker. Press **Left soft key/OK key** to get into option menu. The option menu is similar with Function menu. It is only possible to get into option menu during a call. The functions such as on hold, forward or making a multiparty call need network support. Please contact your network service provider for detail.

In option menu you can select among:

- **Hold single call:** Put the call on hold or recover it.
- **End single call:** End the call.
- **New Call:** Making a new call.
- **Phonebook:** Get into the menu of Phonebook.
- **Msg:** Get into the menu of Messaging.
- **Sound recorder:** Record the conversation.
- **Mute:** press **Left soft key** to turn on or off.
- **DTMF:** Press **Left soft key** to switch on /off.

- **Multiparty call**
 - **Switch:** Keep switching between different parties.
 - **Meeting:** To have a conference phone call.
 - **Transferring:** Transfer current call to other phone.
 - **End A Call:** To end the current call.
 - **End All Calls:** To end all active calls.
 - **Phonebook:** Get into the menu of Phonebook.
 - **Messaging:** Get into the menu of Messaging.
 - **Sound recorder:** Record the conversation.
 - **Mute:** press **Left soft key** to turn on or off.
 - **DTMF:** Press **Left soft key** to switch on /off.

Attention: Some options are available under certain conditions. Such as **Switch only** can be used when there are more than one calls at the same time. The operations with UIM card are same with SIM card. The options include hold/Retrieve, End,, New call, Phone Book, Msg, Mute and DTMF.

4. FUNCTION MENU:

Attention:

- If insert **SIM1 card** and **SIM2 card**, the related menu will show SIM2; if insert **CDMA card** and **SIM card**, the menu will show UIM.
- Some menus of SIM2/UIM will disappear if no SIM2/UIM card. All the following

listed menus and options are in the case of two cards.

- Some menus only appear under certain circumstance.

a. USING FUNCTION MENU:

- In Idle mode, press **Left Soft Key** to get into main menu.
- In all menus or sub menus, press **Navigation keys** to enter a selection, to scroll left, right, up, and down on the display. Press **Left soft key** or **OK key** to enter the selection. Press **Right soft key** to exit current menu. Press **End key** to idle mode.

For the convenience of users, the navigation keys can be set as shortcuts key in idle mode.

- In Idle mode, press **Up key** to access the Calendar..
- In Idle mode, press **Down key** to SMS.
- In Idle mode, press **Left key** to scroll the icon in idle mode.
- In Idle mode, press **Right key** to scroll the icon in idle mode.

b. MENU FUNCTION:

The structure of the menus:

■ Phonebook

Quick Search
Search Entry
Add new contact
Copy All
Delete
Caller Group
Extra Number
Settings
-Memory status
-Preferred storage
-Fields
-Name list tilter
-My vCard
-vCard version
Caller Picture

■ Calls

Calls
-SIM1 call history
-SIM2/UIM call history
General call settings
-SIM1 call settings
-SIM2/UIM call settings
Call Time Display
Call Time Reminder
Black List
Auto Redial
Speed Dial

■ Messages

- SMS
- MMS
- Voice Mail Server
- Broadcast Message

- **Files**

- **Bluetooth**

- **Fun & Games**

- **Facebook**

- **User profiles**

- General
- Meeting
- Outdoor
- Indoor
- Headset
- Bluetooth

- **Video Recorder**

- **Extra**

- Calculator
- Currency converter
- Stopwatch
- E-Book Reader
- Bluetooth

- **Services**

- STK
- WAP
- Data account

- **Media**

- VideoChat
- Camera
- Image Viewer
- Video Recorder
- Video Player
- Audio Player
- Sound Recorder
- FM Radio
- Schedule FM Record

- **Audio Player**

- **Camera**

- **MMS**

- **Setting**

- Phone Setup
- Time and Date
- Schedule Power On/Off
- Language
- Preferred Input Methods
- Display Characteristic
- Auto update of date and time

Smart Dialling
Misc Settings
Network Setup
-SIM1 network setup
-SIM2 network setup
Security Setup
-SIM1 security setup
-SIM2/UIM security setup
Phone Lock
Auto Keypad Lock
Change Password
Data Protect
Restore Factory Settings

■ **Tools**

Calendar
To Do List
Alarm
World Clock

C. PHONEBOOK:

You can save names, mobile phone number, fixed line number, work place phone number and other information by Phone book function. From Main Menu, select Phonebook to get into phonebook options.

Select **Add new contact** and press **OK key** to add new contact.

Attention: The phone can save 500 entries at the most. The SIM/UIM card storage capacity is different. Please contact your service provider for detail.

- **Quick Search:** select this option to get into phone book screen. There is an input space down the bottom of the screen. Input information as searching criteria. Press **switch key** to switch between different input methods.
- **Search Entry:** search record according to names in the phonebook.
- **Add new contact:** add a new record into phonebook. You can select to save in phone's memory or SIM /UIM card. The saving form is slightly different.
- **Copy All:** copy all record in phone's memory or SIM/UIM card. You can select from Phone to SIM/UIM card or from SIM/UIM card to Phone or from one card to another card.
- **Delete:** delete the record. Select to delete all record from SIM/UIM card or phone's memory. Select to delete record one by one from SIM/UIM card or phone's memory.
- **Caller Group:** this set provides 5 call groups for you. You can change the group name and select the caller picture, ringtone and the group member.
- **Extra Number:** set the extra numbers that saved in SIM card such as owner number and SOS number.
- **Settings:**
 - **Memory status:** view the memory status of SIM/UIM card and phone's memory.
 - **Preferred storage:** select the prioritized place to save, SIM/UIM card or phone.
 - **Fields:** set the content of name card in phonebook.
 - **My vCard:** edit owner's name card and send it.
 - **vCard Version:** select the card version.
- **Caller Picture:** select a picture to display when receiving a call.

d. CALLS:

Your mobile phone can save upto 20 records for missed calls, received calls, and dialed calls. Through this menu you can search for all history records.

d1. CALLS:

SIM1 Call History:

- **SIM1 missed calls:** press **OK** to show the list.

Press **Up/Down key** to select the number in the list and then press **OK** to see the detailed information.

Press **Option** to carry on the following functions:

- **View:** see the detailed information.
- **Delete:** delete the current record.
- **Save to Phonebook:** save the number into SIM/UIM card or phone.
- **Dial:** select the SIM/UIM card to dial the current number. If there is only one card in the phone, the phone will dial the number directly.
- **Edit:** edit the current number and then press Send1 key or Send2 key to dial directly. You can also press Left Soft key to select saving it into phonebook or dialing.
- **Send SMS:** edit an SMS and send to the current number.
- **Send MMS:** edit an MMS and send to the current number.
- **SIM1 IP Dial:** IP dial with SIM1. You need set IP number first.
- **SIM2/UIM IP Dial:** IP dial with SIM2/UIM. You need set IP number first.
- **SIM1 dialed calls:** the operations are same with SIM1 missed calls.
- **SIM1 received calls:** the operations are same with SIM1 missed calls.
- **Delete SIM1 call log:** select to empty the selected call history folder or all the call history.
- **SIM1 call time:** This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.
 - **Last Call Time:** check the length of your last call.
 - **Total Sent:** check the total length of all the calls you have dialed.
 - **Total Received:** check the total length of all the calls you have received.
 - **Reset All Time:** reset the call timers.
- **SIM1 GPRS counter**
 - **Last Sent:** record the bites of last uploading.
 - **Last Received:** record the bites of last downloading.
 - **All Sent:** record the total amount of bites has been uploaded.
 - **All Received:** record the total amount of bites has been downloaded.
 - **Reset counter:** reset the counter.

SIM2/Call History:

The operations are same with SIM1 call history. **UIM call history** not include **GPRS counter**.

d2. GENERAL SETTINGS:

I. SIM1 CALL SETTINGS:

Attention: Use this menu to access network services. Please contact your service provider to check their availability and subscribe with them, if you wish.

- **Caller ID:** this network service allows you to prevent your phone number from being displayed on the phone of the person being called.
 - **Set By Network:** use default setting.

- **Hide ID:** hide own number while calling (with service provider's support).
- **Send ID:** show own number while calling.
- **Call waiting:** this network service informs you when someone is trying to reach you while you are on another call. Select to activate or deactivate the function. Select Query status to show the current status.
- **Call divert:** this network service reroutes incoming calls to a phone number that you specify.
 - **Divert all voice calls:** divert all voice calls.
 - **Divert if unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Divert if no answer:** divert calls when you do not answer the phone.
 - **Divert if busy:** divert calls when you are on another call.
 - **Divert all data calls:** divert all data calls.
 - **Cancel all divert:** cancel all call diverting options.
- **Call barring:** this network service allows you to restrict your calls.
 - **Outgoing calls**
 - **All calls:** prohibit all outgoing calls.
 - **International calls:** prohibit international calls.
 - **International except home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **Incoming calls**
 - **All calls:** prohibit all incoming calls.
 - **When roaming:** prohibit incoming calls when you use your phone outside of your home country.
 - **Cancel all:** cancel all call barring settings, allowing to be sent and received normally.
 - **Change barring password:** change the call barring password obtained from your service provider.
- **Line Switching:** switch between line 1 and line 2.
- **Closed User Group:** switch off the User group function.
- **IP Number:** You can set 3 IP dial numbers. Select one and press **Options** to the following operations:
 - **Activate:** active the number. If choose IP dial while dialing, the phone will add the IP number on the front of the number.
 - **Edit:** input or edit the IP number.

II. **SIM2/UIM CALL SETTINGS:**

The operations are same with SIM1 call settings. UIM call setup only have three menus which are Call Waiting, Call Divert and IP Number.

III. **CALLER TIME DISPLAY:**

Set whether to have call time display.

IV. **CALL TIME REMINDER:**

Set whether to have minute reminder at end of each minute during calling.

V. **BLACK LIST:**

You can set at most five commonly used numbers as the black list number. Press **Ok** to access the following options:

- **Mode:** press Left soft key to turn on or off the function. If turn on the function, the

- phone will reject the number in blacklist.
- **Black List Number:** set the black list number and press OK to save. You can set 5 black list numbers at most.

VI. **AUTO REDIAL:**

When the function is set as on, the failed call will be auto redialed.

VII. **SPEED DIAL:**

You can set at the most eight commonly used numbers as speed dial numbers. Press **Ok** to access the following options:

- **Enable Speed Dial:** turn on or off the function.
- **Set Number:** set the numeric keyboard 2-9 correspond to a number. Hold the key to dial the number in idle mode.

e. **MESSAGES:**

e1. **SMS:**

I. **WRITE MESSAGE:**

- Enter your message. The maximum number of characters allowed in a short message varies by service provider. If your message exceeds the maximum number of characters, the phone will support the long message.
- Press **Option** to access the following options for creating a message.
 - **SIM1 done** or **SIM2/UIM done:** finish the message, ready for next step, you can choose SIM1 or SIM2/UIM.
 - **Use Template:** insert a message template.
 - **Insert PHB Number:** insert the number which saved in the phonebook.
 - **Insert PHB name:** insert the name which saved in the phonebook.
 - **Input Method:** change the input method while editing.
- After finishing, select **SIM1 done** or **SIM2/UIM done**, press **Up/Down key** to choose send or save mode.
- **Send Only:** send the message, select this option to get into receiver screen, and then press **Number key** to input the number or search in phone book to find the number. Press **Ok** to send.
- **Save and Send:** save a copy of the message in Outbox and send the message.
- **Save:** save the message in Outbox.
- **Send To Many:** send the message to more than one recipient.
- **Send by Group:** select a call group and send the message to all members of the group.

II. **INBOX:**

This menu includes **SIM1 Inbox** and **SIM2/UIM Inbox**. All the operations are same.

- This folder stores all the messages you have received.
- Press **Up/Down key** to choose a message and press **OK** to read it. Then you can press **Option** to access the following options:
 - **Reply:** reply to the sender.
 - **Delete:** delete the message.
 - **Edit:** edit the message.
 - **Forward:** forward the message to other people.
 - **Delete All:** delete all messages in Inbox.
 - **Use Number:** extract sender numbers from the message.

III. **OUTBOX:**

This menu includes **SIM1 Outbox** and **SIM2/UIM Outbox**. All the operations are same.

- This folder stores messages that the phone is attempting to send or has failed to send.
- Press **Up/Down key** to choose a message and press **OK** to read it. Then you can press **option** to access the following options:
 - **Send from SIM1:** send the message with SIM1. You can choose send or send to groups.
 - **Send from SIM2/UIM:** send the message with SIM2/UIM. You can choose send or send to groups.
 - **Edit:** edit the message.
 - **Delete:** delete the message.
 - **Delete All:** delete all messages in Outbox.
 - **Use Number:** extract sender number from the message.

IV. **TEMPLATE:**

Save some frequent used terms to avoid typing in the same terms many times. From the text template list, press **Option** to access the following options:

- **Edit:** edit the template.
- **Remove:** delete the template.
- **Write Message:** create and send a new message.

V. **MESSAGE SETTINGS:**

Use this menu to set up various options for using the messaging service. This menu includes **SIM1 message settings** and **SIM2/UIM message settings**. All the operations are same.

UIM message settings only have two menus which are **Common Settings** and **Memory Status**.

- **Profile Setting:** select appropriate mode for message. Different mode has different setting in folder name, service center number, expired date, form and other features.
- **Common Setting**
 - **Delivery Report:** set the network to inform you when your messages have been delivered.
 - **Reply Path:** allow recipients to reply to you through your SMS server.
- **Attention:** this function is only available with service provider's support.
- **Memory Status:** show the memory status of SIM/UIM card and phone's memory.
- **Preferred Storage:** select the preferred storage.

e2. **MMS:**

refer q

e3. **VOICE MAIL SERVER:**

Use this menu to store the number of the voicemail server and access your voicemails.

This menu includes **SIM1 voicemail server** and **SIM2 /UIM voicemail server**. All the operations are same.

- **Connect to Voice:** connect to the voicemail server to listen to your messages.
- **Edit:** edit the voicemail server number and server name.

e4. BROADCAST MESSAGE:

Use this menu to change the settings for receiving CB messages. This menu includes **SIM1 broadcast message** and **SIM2 broadcast message**. All the operations are same.

- **Receive Mode:** enable or disable the reception of broadcast messages.
- **Read Message:** select the menu to access to the broadcasting message you ordered.
- **Languages:** select the languages in which broadcast messages display.
- **Channel Setting:** specify the channels from which you receive broadcast messages.

Attention: the broadcasting messages are provided by network service provider. Please contact your service provider for details.

f. FILE MANAGER:

Manage the files saved in phone and memory card. Press **Up/Down key** to select then press **Left soft key** to option menu:

- **Open:** open the folder.
- **Create Folder:** create a new folder in it.
- **Format:** Format the folder.

g. BLUETOOTH:

Your phone is equipped with Bluetooth technology which enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely. There are many Bluetooth devices around us, such as mobile phone, computer, and Bluetooth headset and so on. They are compliant with Bluetooth wireless technology:

- *HSP (Bluetooth headset to make phone call), A2DP/GAVDP (Stereo music function): These two functions are used on Bluetooth headset. Please pay attention to the product instructions, as many Bluetooth headsets only supports one of these functions.*
- *FTP(Change data via Bluetooth wireless technology with other mobile phone)*
- *SPP(Change data via Bluetooth wireless technology with computer)*
- *DUN(Connecting to internet when connecting to computer)*

Press **Left Soft Key/OK Key** to access the following options:

- **Power:** turn on or off Bluetooth.
- **Inquiry Audio Device:** search for Bluetooth audio headset, which is the opening Bluetooth headset. The devices include HSP and A2DP/GAVDP.

Attention: Only Bluetooth headset can open on this menu, and other device should open from **My Device**.

- **Remote Control:** phone has connected with some BT device which can control the phone remotely.
- **My Device:** If you have connected with some Bluetooth devices, it will show the devices list. Otherwise, you can choose **Inquiry BT Device** to search other Bluetooth devices except Bluetooth headset. Select a device and press **Bond**. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press **OK**. When the owner of the other device enters the same code, the pairing is complete.
 - **Connect:** connect to the device.
 - **Rename:** rename the selected device.
 - **Delete:** delete the selected device.
 - **Delete All:** delete all devices from the list.

- **Service List:** access the Bluetooth service list of the device.
- **Active Device:** display the connecting devices list. You can choose one to disconnect.
- **Setting:** set the Bluetooth functions of this mobile phone.
 - **Visibility:** allow other Bluetooth devices to search for your phone.
 - **Change Device Name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
 - **Authentication:** determine if the phone asks for your confirmation when other devices access your data.
 - **Audio Path:** choose the sound source output when Bluetooth connected.
 - **Storage:** select phone or memory card.
 - **FTP Setting:** set the share folder and access right.
 - **BIP setting:** set the shared folder path and popedom of the Bluetooth working folder.
- **About:** display the Bluetooth information.

h. FUN:

The mobile phone provide you with multiple applied functions, which include **Multimedia Space**, **main** and **MSN**, to make your work and leisure activities more relaxed.

- **Multimedia Space:** User may download and play the applications. GPRS traffic generated during the download process shall be charged by local operators. Please call the customer service phones of the local operators to consult about the specific charges.
- **Main:** The function will connect to a network and generate GPRS traffic. Please call the customer service phones of the local operators to consult about the charges.
- **MSN:** The mobile phone support MSN. You may use the function and log in MSN.

i. FACEBOOK:

The menu will connect to the website “<http://www.facebook.com>” and generate GPRS traffic. Please call the customer service phones of the local operators to consult about the charges.

j. USER PROFILES:

User can select different mode, and can define your own modes. This set of mobile provides many modes.

- **General**
 - **Activate:** active General mode.
 - **Customize:** set the General mode.
 - **Tone setup:** set tone for incoming call, Power on, Power off, message tone and keypad tone.
 - **Volume:** adjust the volume for ring tone and key tone.
 - **Alert type:** select alert type. There are ring, vibration only, vibration and ring, vibration then ring.
 - **Ring type:** select to single, repeat or ascending.
 - **Extra tone:** set reminding sound for special case: warning, error, camp on or connect.
 - **Answer mode:** turn on or off the feature of answering by any key.
- **Meeting:** operating as General Mode
- **Outdoor:** operating as General Mode
- **Indoor:** operating as General Mode
- **Headset:** plug in headset to active this mode. Personal setting is as General Mode
- **Bluetooth:** when connected to the Bluetooth, the mode opens automatically. Personal setting is as General Mode.

Attention: In idle mode, hold # key to switch between silence and current mode.

k. VIDEO RECORDER:

Your mobile phone supports video recorder function, select **Video Recorder** to get into menu.

Press **Left soft key** to access the following options:

- **Cam Recorder Setting**: set related parameters for camcorder.
- **Video Setting**: set video parameters.
- **Effect Setting**: set video effects.
- **Storage**: select saving pass to phone or memory card.
- **Restore Default**: restore default setting.

Shortcut key operation:

- Press **OK key** or **0 Key** or **Camera key** to Start/Pause record.
- Press **Up/Down key** to adjust the focal distance.
- Press **Left/Right key** to adjust EV.

l. EXTRA:

I1. CALCULATOR:

Use this menu to perform basic arithmetic functions such as addition, subtraction, multiplication, and division.

1. Enter the first number.
2. Press one of the **Navigation keys** to access the math function you want.
3. Enter the second number.
4. Press **Left soft key** or **OK key** to view the result.
5. If necessary, repeat from step 2 to continue the calculation.

Attention: the calculator's precision is limited and may have deviation especially in dividing.

I2. CURRENCY CONVERTER:

Use this menu for currency conversions.

- Input the rate and then press **Left soft key** or **OK key**.
- Set the ratio then input the local currency.
- Press **Left soft key** or **OK key** to view the result.

I3. STOPWATCH:

Use this menu to measure elapsed time.

- **Typical Stopwatch**: two timing methods include **Split Timing** and **Lap Timing**. You can also save the record and view or delete it.
- **nWay Stopwatch**: press one of the navigation key to select an interval and begin to record. You can repeat this step for a total of 4 intervals. Press **Left soft key** or **OK key** to pause, then press **right soft key** reset the timers.
-

I4. E-BOOK READER:

Use this menu to read the E-Book file. The supported file formats are TXT and PDB. You can copy the file to the Ebook folder to read

I5. BLUETOOTH:

Refer "g"

m. SERVICES:

m1. STK:

This menu is available if you use a SIM AT card that provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

m2. WAP:

The Wireless Application Protocol (WAP) on your phone allows you to access the wireless web. From the wireless web, you can access updated information and a wide variety of media content, such as wallpapers, ringtones, and music files.

Attention: GPRS service need network support. Only available when the mobile is switch on and stays within GPRS network coverage.

- **Homepage:** connect your phone to the network and load the homepage of the wireless web service provider.
- **Bookmarks:** save URL addresses to quickly access a website.
- **Recent pages:** show all history record that you have visited.
- **Offline pages:** show all the webs saved.
- **Enter address:** enter a URL address manually.
- **Service inbox:** where to save news sent by service provider
- **Settings:** set internet surf
 - **Select SIM**
 - **Edit account**
 - **Browser options**
 - **Service message settings**
 - **Clear cache**
 - **Clear cookies**
 - **Trusted Certificates**

m3. DATA ACCOUNT:

- **GSM data:** select an account to go in
 - **Account Name:** edit account name.
 - **Number:** enter the PPP server phone number.
 - **User Name:** enter the login ID.
 - **Password:** enter the login password.
 - **Line Type:** select analogue or ISDN.
 - **Speed:** select the speed for transmit.
 - **DNS:** enter the DNS address.
- **GPRS:** select an account to go in
 - **Account Name:** select to edit account name
 - **APN:** enter the access point name of the GPRS network gateway.
 - **User Name:** enter the login ID.
 - **Password:** enter the login password.
 - **Auth. Type:** select authentication type.

n. MEDIA

n1. CAMERA:

Refer "p"

n2. IMAGE VIEWER:

Select Image Viewer to open the album and look the photos.

Press **Left soft key /OK key** to access the following options:

- **View**: display the image.
- **Browse style**: change the view mode on the file list.
- **Use**: set the image as wallpaper, screen saver, power on/off display or caller ID image.
- **Send**: send the image via MMS or Bluetooth.
- **Rename**: change the file name.
- **Delete**: delete the selected files.
- **Delete all files**: delete all files.
- **Sort**: change the sort order of files.
- **Storage**: select the pass to store or to read, either from phone or from memory card.

Shortcut key operation:

- Press **Left/Right key or up/down key** to change the picture.

n3. VIDEO RECORDER:

Refer "k"

n4. VIDEO PLAYER:

Select **Video Player** menu to go in video player

Select the file to be played in folder and press **Left soft key/OK key** to access the following options:

- **Play**: go into play screen
- **Send**: send the video via Bluetooth.
- **Rename**: rename the files.
- **Delete**: delete the selected files.
- **Delete All Files**: delete all saved files.
- **Sort**: set the logic for sorting.
- **Storage**: select the pass to store or to read, either from phone or from memory card.

Shortcut key operation:

- Press **OK key** to Start/Pause playing.
- Press **Left/Right key** to forward or back playing.
- Press *** key/# key** to adjust volume.

n5. AUDIO PLAYER:

Refer "o"

n6. SOUND RECORDER:

Use this menu to record voice memos

Press **Option** to access the following options:

- **Record**: record a new voice memo.
- **List**: show the voice memo list. Select a file and press **Option** to access the following options:
 - **Play**: play the voice memo.
 - **Append**: add new extended part to the selected file. (only for amr and awb file)
 - **Rename**: change the name of voice memo.
 - **Delete**: delete the voice memo.
 - **Delete all files**: delete all the voice memos.
 - **Settings**: set the parameters for sound record.
 - **Use**: set the memo as ringtone to user profile.
 - **Send**: send it via MMS or Bluetooth.

Shortcut key operation:

- Press **Left Soft key/OK key** to start/pause recording.

n7. FM RADIO:

You can listen FM radio and record the program by this phone, select the menu of **FM Radio** to use it

Press **Options** to access the following options:

- **Channel list:** show the channel list. You can choose a channel and play or delete it. You can also change the name of the channel. At most 9 channels.
- **Manual Input:** input one channel manual and play it.
- **Preset auto search:** search the channel automatically and save to the channel list.
- **Settings:** set the background play and corresponds items of recording.

Shortcut key operation:

- Press **Down key** to On/Off search function. If enable the function, the phone will search the channel automatically when press **Left/Right key**.
- Press **Up key** to Play/Stop the program.
- Press **Left/Right key** to change channel.
- Press **1- 9 key** to play the corresponding channel which saved in the channel list.
- Press *** key/# key** to adjust volume.

n8. SCHEDULE FM RECORD:

User may set a time period, when given time's up, the phone will record your given FM programme and save to the phone periodically.

o. AUDIO PLAYER:

Use this menu to enjoy music. First, you need to save MP3 files in your phone's memory or memory card.

Select **Audio player** to go into MP3 screen. Press **List** to go into play list, use **Up/Down key** to select songs to play.

Press **option** to access the following options:

- **Play:** play the song.
- **Details:** see detail information of the song.
- **Add To Rings:** add the song into ringtone.
- **Add:** add a new song to the list. The menu will not show if the **List auto gen** function is set as **ON**.
- **Remove:** remove the song from the list. The menu will not show if the **List auto gen** function is set as **ON**.
- **Remove all:** remove all the songs from the list. The menu will not show if the **List auto gen** function is set as **ON**.
- **Refresh list:** refresh the list. The menu will not show if the **List auto gen** function is set as **OFF**.
- **Settings:** set the default settings for play music files.
- **Settings:** set the default settings for play music files.
 - **Play List:** memory status for phone or memory card.
 - **List Auto Gen.:** generation music list automatically or not.
 - **Repeat:** select a repeat mode.
 - **Shuffle:** turn shuffle mode on or off.
 - **Background Play:** select to play music even after exit this menu.
 - **Lyrics Display:** open/close the Lyrics Display.

Shortcut key operation:

- Press **Up key** to play/pause the song.
- Press **Down key** to stop the song.
- Press **Left/Right key** to change songs.
- Press *** key/# key** to adjust volume.

p. CAMERA:

Select **Camera** or press **Camera key** in idle mode to go into menu.

Press **Left soft key** to access the following options:

- **Album:** go to the album.
- **Camera Setting:** set related parameters for photo taking.
- **Image Setting:** set photo's size and quality.
- **White Balance:** choose a light mode for photo taking.
- **Scene Mode:** according to the environment to choose a mode
- **Effect Settings:** choose screen style.
- **Storage:** select saving pass to phone or memory card.
- **Restore Default:** restore default setting.

Shortcut key operation:

- Press **OK key** or **Camera key** to take a photo.
- Press **Up/Down key** to select the icons that user want to set again. Then press "Alt" key to change previous settings.
- Press **Left/Right key** to adjust EV.

q. MMS:

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, Audio and sound, from phone to phone.

- **Write message:** write a new MMS.
- **Inbox:** this folder stores all the MMS you have received.
 - **View:** play the MMS.
 - **Reply :** reply to sender via MMS.
 - **Reply by SMS:** reply to sender via SMS.
 - **Reply to all:** reply to all recipients of the message.
 - **Forward:** forward the MMS to other people.
 - **Delete:** delete the MMS.
 - **Delete All:** delete all MMS in the Inbox.
 - **Save as template:** save the MMS as a template.
 - **Properties:** show the detail information of the MMS..
 - **Use Details:** extract the numbers, pictures, sounds, or URLs from the MMS.
- **Outbox:** where to save the messages that have been sent.
 - **View:** play the MMS.
 - **Forward:** forward the MMS to other people.
 - **Edit:** edit the MMS.
 - **Delete:** delete the MMS.
 - **Delete All:** delete all MMS in the Outbox.
 - **Save as template:** save the MMS as a template.
 - **Properties:** show the detail information of the MMS.
 - **Use Details:** extract the numbers, pictures, sounds, or URLs from the MMS.
- **Drafts:** to save the message before sending; after sending the message will be moved to Outbox.
 - **View:** play the MMS.
 - **Send:** send the MMS.
 - **Edit:** edit the MMS.
 - **Delete:** delete the MMS.
 - **Delete All:** delete all MMS in the Draft.
 - **Save as template:** save the MMS as a template.
 - **Properties:** show the detail information of the MMS..
 - **Use Details:** extract the numbers, pictures, sounds, or URLs from the MMS.

- **Template:** you can access embedded MMS templates or ones you have saved so that you can use them in composing an MMS message.
- **Message Settings:** you can configure MMS settings.
 - **Compose:** set the items of MMS.
 - **Send:** set the items while sending.
 - **Retrieve:** set the items while retrieving.
 - **Filter:** set the filter while receiving.
 - **Server Profiles:** select SIM card and set the network service.
 - **Memory Status:** show the memory status.

r. SETTINGS:

This menu includes many personal setting to the phone.

r1. PHONE SETUP:

- **Time and Date:** set the date and time in mobile phone.
 - **Set Home City:** select a city for the time setting.
 - **Set Time/Date:** set current time and date.
 - **Set Format:** select a format to show the time, 12 hours or 24 hours.
- **Schedule Power On/Off:** set the time that the mobile phone will be switch on/off automatically.
- **Language:** select the language that will be used.
- **Preferred Input Methods:** select a default input method.
- **Display Characteristic**
 - **Wallpaper:** select the wallpaper for idle mode.
 - **Screen Saver:** select a screen saver for idle mode and the default time setting.
 - **Power On Display:** select 3D to display at switch on. It could be default setting or downloaded.
 - **Power Off Display:** select 3D to display at switch off. It could be default setting or downloaded.
 - **Show Date and Time:** select switch on/off the display of time and date in idle mode.
- **Auto update of date and time:** select switch on/off the auto update function.
- **Smart Dialling:** select switch on/off the smart dialing function. If the function is set as on, the phone will search for all the match numbers in the phone book automatically with the input number and show as a list in idle mode. You can choose one number to dial.
- **Misc Setting:** set the LCD backlight.

r2. NETWORK SETUP:

This menu includes **SIM1 network setup** and **SIM2 network setup**. All the operations are same.

- **Network Selection**
 - **New Search:** register the network.
 - **Select Network:** select a network from the network list and register.
 - **Selection Mode:** press **Change** to switch the search mode.
 - **Automatic:** auto search the network which the SIM card belongs to.
 - **Manual:** manual search all current available network and do manual registration.
- **Preferred Networks:** pre save the preferred networks.

r3. SECURITY SETUP:

I. SIM1 SECURITY SETUP:

- **SIM1 Lock:** Choose security setting under this Menu to avoid unauthorized usage of mobile phone or SIM Card.

The 4-to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorized use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Attention: If you enter an incorrect PIN/PIN2 three times in succession, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

- **Fixed Dial:** If supported by your SIM card, Fixed Dial mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored in **Fixed Dial List**.

- **Mode:** enable or disable the feature. (PIN2 code is needed).

- **Fixed Dial List:** sett the fixed dial numbers.

Attention: you need PIN2 code to enable or disable the feature. The PIN2 code is supplied by your network operator.

- **Barred Dial:** If supported by your SIM card, Barred Dial mode forbids some numbers to dial.

- **Change Password:** change the PIN/PIN2 code.

II. **SIM2/UIM SECURITY SETUP:**

The operations are with SIM1 security setup. **SIM2 security setup** not include **Barred Dial**. **UIM security setup** not include **Fixed Dial** and **Barred Dial**.

III. **PHONE LOCK:**

The Phone Lock feature locks the phone from unauthorized use. When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on. The password is preset to 1234. To change the password, use the **Change Password** menu.

IV. **AUTO KEY LOCK:**

Turn on or off the function of locking the keypad automatically. You can set the waiting time to turn on the function.

- **Lock**

- The keypad will be locked automatically after the waiting time.

- Press **Left soft key** and then *** key** or hold **Space key** to lock keypad manually in idle mode (only the SIM card is active).

- **Unlock**

- Press **Left soft key** and then *** key** to unlock.

V. **CHANGE PASSWORD:**

Change the phone lock password.

VI. **DATA PROTECT:**

Press **Left Soft Key** or **Ok key** to access the following options:

- **DataLock:** turn on or off the function. The password is preset to 1234.

- **Protect Object:** User may select the objects that need to be protected by password. The password is preset to 1234.

- **Change Password:** change the code. The password is preset to 1234.

Once select this function, password must be inputted every time the function is switch on.

Attention: The Data Lock and the protected objects are turned on at the same time

r4. **RESTORE FACTORY SETTINGS:**

Use this menu to reset all settings in your phone to default setup. The password is preset to

1234. You can change this password.

S. TOOLS:

s1. CALENDER:

The Calendar feature enables you to keep track of your schedule and tasks.

When you access the **Calendar** menu, the calendar in Month view appears with today's date indicated highlight.

Selecting a day

- Press **Left /Right key** to move by day.
- Press **Up/Down key** to move by week.

Using calendar options

Press **Option** to access the following options:

- **View Tasks:** view all tasks.
- **Add Task:** add a new task. Select task type first, then enter information or change the settings.
- **Jump To Date:** you can view tasks for the selected date.
- **Go To Weekly/Monthly View:** change the view mode of the calendar.

s2. TO DO LIST:

Support many to do list items. You can **View, Add, Edit, Delete, Delete All, Send vCalendar** on a selected item.

S3. ALARM:

Use this menu to set alarms to sound at a specific time. A wake-up alarm is not affected by your sound setting.

Five alarm clocks can be set: select an alarm clock to edit and set.

s4. WORLD CLOCK:

Use this menu to find out what time it is in another part of the world. From the world map, press Left/Right key to change. As the time line moves, the time and date of the given zone display.

From the world map, press Option and select Daylight saving time for foreign city. Press Left soft key /OK key to turn on or off the feature.

5. INPUT METHOD:

Your device has a full keyboard. You can enter punctuation marks by pressing the corresponding key or a combination of keys.



- To switch between the different character cases, press the **Shift key**. On the display, **ABC** and **abc** indicate the selected character case.
- To insert digits, press the **Num Lock key**.
- To insert the characters printed at the top of the keys, press the **Function key** and then press the corresponding key.
- To enter only the characters printed at the top of key, press the **Function key** twice quickly.
- To erase a character, press the Backspace key. To erase several characters, press and hold the **Backspace key**.
- To insert characters that are not shown on the keypad, press the **Symbol key**.
- To enter a space, press **Space key**.
- To change to the next line, press **Enter key**.
- To change the writing language, press the **Switch key**.

